

MT 158

Assembly exercise: ball valve and shut-off valve



The illustration shows the tool box with kits and tools. In the foreground the valves and fittings as they are assembled from the kits.

Description

- practical exercise based on the assembly of a ball valve and a shut-off valve
- part of the GUNT Practice Line for assembly, maintenance and repair

Shut-off valves, of the design presented here, are used to shut off and restrict the flow of media. They must be capable of complete flow shut-off. Closure of the valve should be such that the volumetric flow does not suddenly drop to zero in order to prevent shock loads. The valve taper is moved by the spindle and makes a metallic seal against the seating ring pressed into the housing. The spindle is sealed by a packing gland. The joint between the housing and the clamp cover is sealed by a flat seal.

Ball valves are used where media flows or pressures in pipelines need to be stopped quickly and easily, e.g. when valves and fittings are to be removed from a pressurised pipeline. They have a very low flow resistance when open, require little space due to the compact design, and have a self-cleaning sealing face. The sealing body is a ball with a cylindrical bore allowing full flow when the valve is fully open. The ball is rotated through 90° by way of a lever with spindle, enabling it to open or close the valve fully.

The MT 158 practice kit forms part of the GUNT Practice Line for assembly, maintenance and repair designed for training at technical colleges and in company training centres. A close link between theory and practice is key to the learning content.

MT 158 enables two typical shut-off valves to be assembled and disassembled. Students become familiar with all the components and their modes of operation. The parts are clearly laid out and well protected in a tool box. Systematic assembly and disassembly of valves and fittings is practiced. The accompanying material details the individual steps involved, and provides additional information on the areas of application, mode of operation and design of the fittings.


Learning objectives/experiments

- design and function of a ball valve
- design and function of a shut-off valve
- assembly and disassembly, including for the purposes of maintenance and repair
- replacing components (e.g. seal)
- comparison of 2 different valves and fittings
- reading and understanding engineering drawings and operating instructions
- together with the valves and fittings test stand MT 162
 - leak testing of the assembled valve




MT 158


Assembly exercise: ball valve and shut-off valve

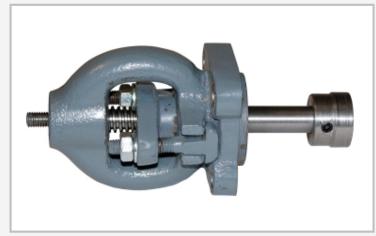

Assembly unit 2 of the shut-off valve, assembled

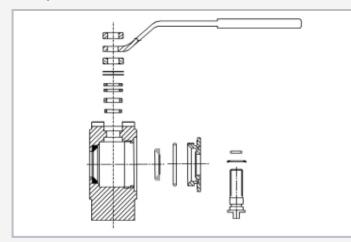

Assembly drawing of the ball valve

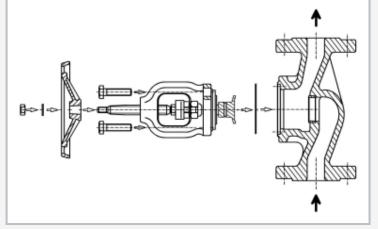

Assembly drawing of the shut-off valve

Specification

- [1] learning concept for assembly exercises on valves and fittings
- [2] shut-off valve, as kit
- [3] 2-way ball valve, as kit
- [4] complete assembly tool kit
- [5] valve parts and tools housed in a sheet-steel tool box
- [6] part of the GUNT Practice Line for assembly, maintenance and repair

Technical data

Shut-off valve with flange connections

- DN25, PN16
- housing, hand wheel, clamp cover, packing gland frame: grey cast iron
- taper, seating ring, spindle, ring segment etc.: stainless steel

Ball valve with flange connections

- DN25, PN16
- housing: C22
- ∎ ball: brass
- spindle, lever, disks etc.: galvanized steel

LxWxH: 720x360x310mm (tool box) Weight: approx. 35kg

Scope of delivery

- 1 kit (shut-off valve)
- 1 kit (ball valve)
- 1 set of tools
- 1 set of small parts
- 1 tool box with foam inlay
- 1 set of instructional material, consisting of: technical description of system, complete set of drawings with lists of parts, description of assembly and disassembly sequences, also in relation to repair operations



MT 158 Assembly exercise: ball valve and shut-off valve

Optional accessories

051.16200 MT 162

Hydraulic valves and fittings test stand

G.U.N.T. Gerätebau GmbH, Hanskampring 15-17, D-22885 Barsbüttel, Telefon (040) 67 08 54-0, Fax (040) 67 08 54-42, Email sales@gunt.de, Web www.gunt.de We reserve the right to modify our products without any notifications. Page 3/3 - 04.2023